


The Proclaimer®

Operating Instructions

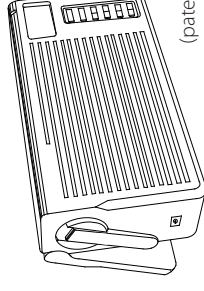

(patent pending)

IMPORTANT – Please Read This Before Using the Proclaimer! **Getting Started**

Charge the battery pack before using the Proclaimer for the first time. For best results, do not play the Proclaimer while it is charging.

The battery pack may be charged three (3) ways:

1. **AC/DC Power Supply (Accepts 100 -240 VAC; 50/60Hz)** – Plug the adapter into the Proclaimer, then connect to an external power source. The indicator may show a full charge after only 20 or 30 minutes; however, the Proclaimer will still be charging and must continue charging for at least 4 hours. After the first charge, simply play the Proclaimer until it stops and then recharge for another 4 hours (8 hours for solar charging – remove plastic film first). Repeat this process until the Proclaimer has been charged/discharged 3 times. Each time you will see the charge and play time extend until the maximum capacity of the battery is reached.
2. **Solar Charging** – Peel off plastic film. Place the Proclaimer in full sunlight with solar panel raised toward the sun and let the unit charge 7 – 8 hours. After this 1st charge, play the Proclaimer until it stops and then recharge. As in above, charge and discharge a total of 3 times.
3. **Hand Crank** – Crank the Proclaimer handle for 5 minutes (either direction) to condition the battery, and then crank an additional 5 minutes for each 20 – 25 minutes of play time at medium volume (level 17).

Note: Hand crank not intended to fully charge the battery.


Maintenance Charging

During regular use of the Proclaimer, the battery pack will need recharging.

1. **AC/DC Power Supply** – Recharge using adapter about 1/2 hour for every hour of use.
2. **Solar Charging** – Recharge in full sun about 1 hour for every hour of use.
3. **Hand Crank** – Recharge by cranking (either direction) for 15 minutes for every hour of use.

Controls

The Proclaimer®

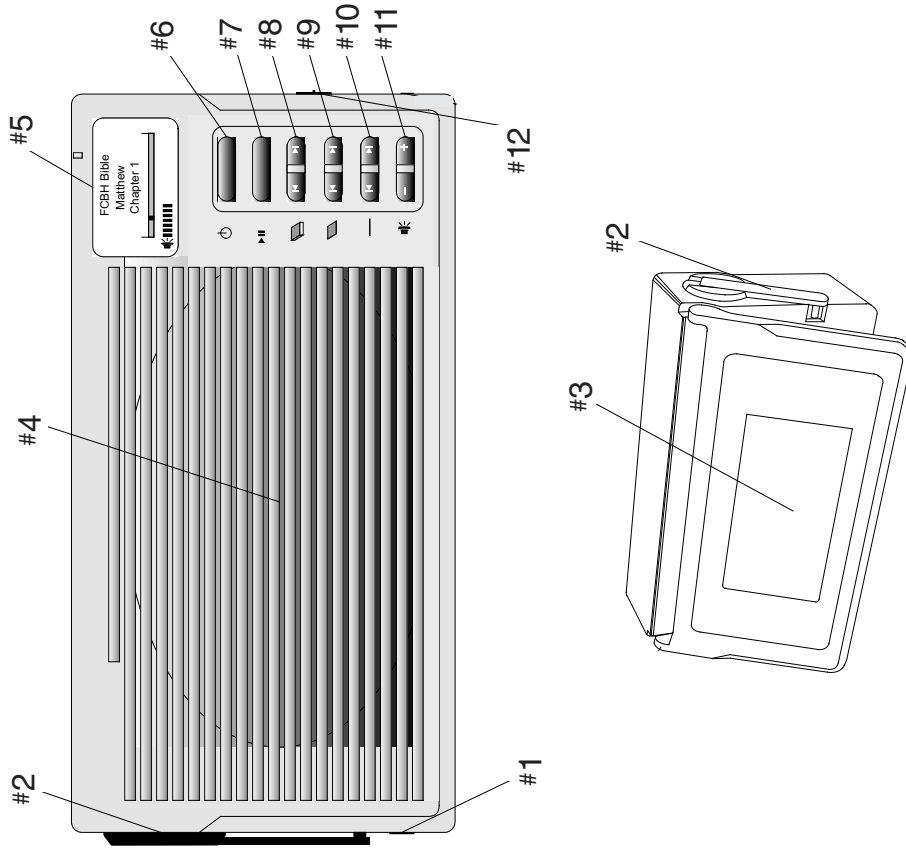

4. **Speaker**
5. **Display (visible when unit is ON)** – Top Line: Book; Second Line: Book and Chapter; Third Line: Volume Level (0-31), Chapter Progress Indicator and Battery Level Indicator.
NOTE: Book and chapter may not be visible at all times. Listen for description.
6. **Power Button** – To turn ON, press this button and hold for 2-3 seconds. The green light will go on. To turn OFF, press this button and hold for 2-3 seconds. The sound will first go off, and then the green light will go out.
7. **Play/Pause Button** – Tap to PAUSE the unit. Tap it again to continue playing. If the unit is paused for 30 minutes, the unit will automatically power OFF.
8. **Book Button** – Tap to move forward or backward by Book. Press and hold to continuously move forward or backward by Book.
9. **Chapter Button** – Tap to move forward or backward by Chapter.
10. **Scroll Button** – Press and hold down to move forward or backward within the Chapter.
11. **Volume Button** – Increase the volume by pressing (+); decrease the volume by pressing (-).
12. **Audio Output** – Use this 3.5mm jack to connect external audio equipment (earphones, PA system, amplifier). When this jack is connected, the speaker automatically turns off.

1. **AC/DC Power Jack** – AC/DC charger is plugged into this jack to charge the battery from an AC Source.
2. **Hand Crank** – Turn (either direction) to hand charge the battery.
3. **Solar Panel** – Lift towards sun to charge the battery from sunlight. The solar panel should be adjusted to receive direct sunlight without obstacles or shadows.

PRO.INST-ENG.

Faith Comes By Hearing