

The Proclaimer[®]


Operating Instructions



Important – PLEASE READ BEFORE USING THE PROCLAIMER

Getting Started


1. Raise the solar panel.
2. Remove the cover plate screw and cover plate.
3. Move battery switch to the ON (I) position.
4. Replace the cover plate with screw.
5. Charge the Proclaimer before using for the first time. For best results, do not play the Proclaimer while charging.

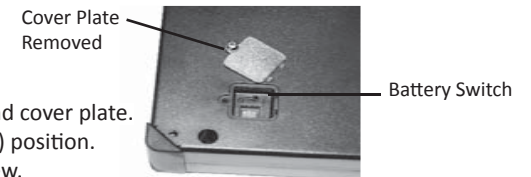






The Proclaimer may be charged three (3) ways:

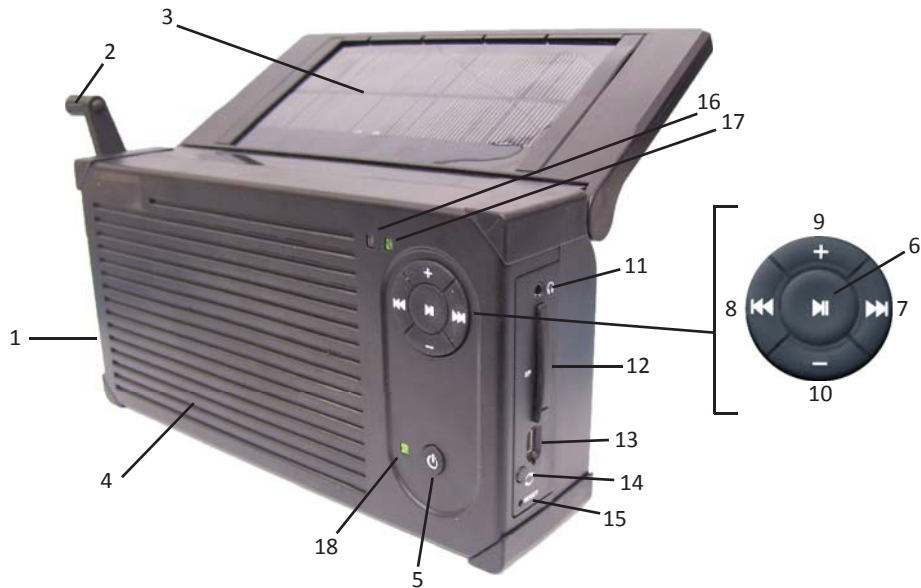

1. AC/DC Power Supply (accepts 100-240 VAC; 50/60 Hz) – Plug the adapter into the Proclaimer and connect to an external power source. Charge the unit 2-3 hours for a complete charge.
2. Solar Charging – Place the Proclaimer in full sunlight, with solar panel raised, 7-8 hours for a complete charge (12-16 hours in cloudy conditions).
3. Hand Crank – Use if there is no electricity or sunlight. Crank the handle for 5 minutes (either direction) for each 20 minutes of play time at medium volume.
Note – The hand crank is not intended to fully charge the Proclaimer.

Re-charge the Proclaimer using any of the three methods above.



6. Play/Pause Button – Press  to PAUSE the unit. Press again to continue playing. If the unit is paused for an extended time, the Proclaimer will automatically power off.
7. Book/Chapter Forward Button – Press  to move forward by CHAPTER. Press and HOLD to move forward by BOOK.
8. Book/Chapter Backward Button – Press  to move backward by CHAPTER. Press and HOLD to move backward by BOOK.
9. Volume Up Button – Increase volume by pressing .
10. Volume Down Button – Decrease volume by pressing .
11. Audio Output – Use to connect the Proclaimer to external audio equipment (such as earphones, PA system, or amplifier). While connected to external equipment, the Proclaimer speaker automatically turns off.
12. EP (Expansion Port) – Use to play an Authorized FCBH Memory Card. Any other type of memory card WILL NOT work and could cause damage to the Proclaimer.
13. Factory Port – For Factory use only.
14. Content Selection Button – Press to switch from the Internal Content to the External Content (Authorized FCBH Memory Card).
15. Reset Button – Press if the Proclaimer is charged but stops playing, using a thin object such as a paper clip. Press the Power button to re-start the unit.
16. Charge Indicator – The light will be RED while the unit is charging.
17. Play/Pause Indicator – The light will be GREEN while the unit is playing and will FLASH when the unit is paused.
18. Content Selection Indicator – The light will be GREEN when the unit is playing the Internal Memory Content and will be RED when playing the External Content (Authorized FCBH Memory Card).
19. Battery Switch – If the unit will be STORED for three (3) months or more:
 - Raise the solar panel and remove the cover plate screw and the cover plate.
 - Move battery switch to the OFF (O) position.
 - Replace the cover plate with screw.

Controls

1. AC/DC Power Plug Input
2. Hand Crank
3. Solar Panel
4. Speaker
5. Power Button – To turn ON: press  and hold for 2-3 seconds. The light will go on. To turn OFF: press  and hold for 2-3 seconds. The sound will go off first and then the light will go out.

